Dog Training Tool (DTT6)

User manual



CONTENT

SAFETY INSTRUCTIONS	4
WARANTY	5
TECHNICAL SPECIFICATIONS	5
CALIBRE	5
DTT6 PARTS	6
OVERVIEW	6
OPERATION	7
LOAD	8
COCK	9
UNCOCK	9
FIRE	10
MAINTENANCE	11
CLEANING	11
REPAIRS	11





A CAUTION

For your own safety and the safety of others, read this manual carefully before you make the first attempts at "shooting".

- Never point the muzzle at humans or animals.
- Use only the intended ammunition.
- Never transport a loaded device.
- Repairs should only be carried out by a specialized company or gunsmith.
- Never leave a cocked device unattended.
- Never hand someone a cocked device.
- This device generates a loud bang, wearing hearing protection is recommended.
- Think about your dogs hearing before you fire.
- Never "fire" without a cartridge in the chamber!



1 CAUTION

immediately.

In Switzerland, this device is not considered a weapon. You can find a confirmation of the fedpol at www.vogtwaffen.ch Please observe the respective weapon laws in your country! Any modifications made to this unit may result in a change in the classification under weapons law and is therefore inadmissible. In this case, the manufacturer's warranty expires

SAFETY INSTRUCTIONS



WARANTY

The manufacturer's warranty is one year and does not apply if the defect has occurred through own fault.

We assume no liability if the goods are exported abroad and do not comply with the legal regulations applicable there, and if the owner/buyer encounters legal difficulties and their consequences.

TECHNICAL SPECIFICATIONS


Calibre:	6mm FLOBERT PLATZ 6mm FLOBERT BLANC 6mm START
Drum capacity:	6 Shots


CALIBRE






OVERVIEW

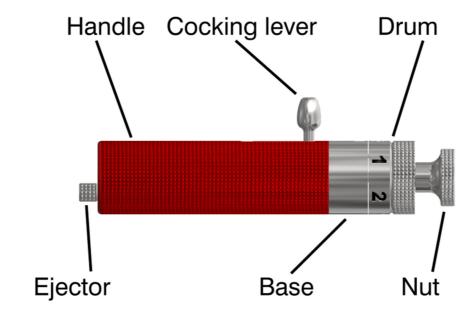

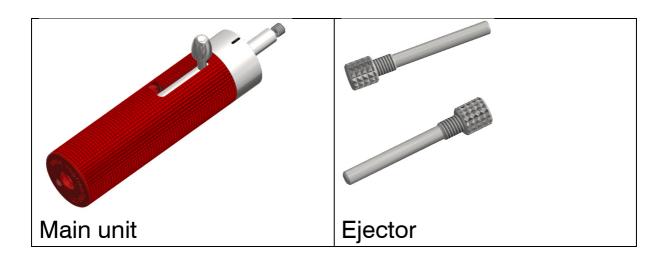

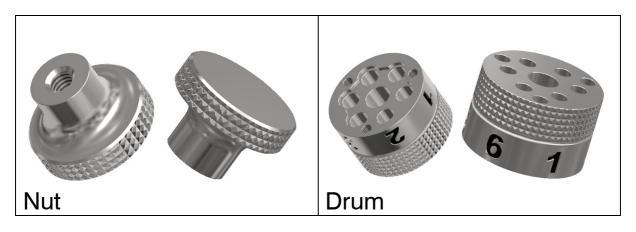



UNLOAD



A CAUTION

First make sure that the device is in uncocked state. (-> UNCOCK)

- Hold the handle with one hand and loosen the nut with the other hand.
- Unscrew the nut completely.
- Remove the drum.



Remove the cartridges or empty shell casings from the drum. If necessary, use the ejector to eject the shell cases from the front of the drum.

Check that all chambers in the drum are empty.

LOAD

• Carry out the steps for unloading.



Only use the cartridges intended for this device !!!



Fill the chambers with the cartridges.



Hold the filled drum with one hand and guide the axis of the main unit through the drum with the other hand.





Turn the device 180° and put the nut on. Tighten the nut hand-tight.

COCK



Pull the tension lever all the way down and then to the left to the latching position.

UNCOCK

- Hold the cocking lever tightly.
- Pull the cocking lever to the right out of the latching position.
- Slowly escort the cocking lever to the front.

A CAUTION

The tension lever or spring is under high tension. Make sure that you hold the cocking lever firmly and that the spring is not released uncontrolled. This would cause the cartridge to fire if there is still a cartridge in the chamber!



FIRE



Turn the drum onto a loaded chamber and make sure it is securely engaged!

 Keep the device away from your body in a safe direction.



A CAUTION

"Make sure your finger or any part of your body is NOT in front of the drum to avoid escaping gas!





Use your thumb to push the cocking lever to the right until it jumps out of the locking position and fires the cartridge.



CAUTION

Never dry fire -> Never "fire" without a cartridge in the chamber because this will damage the firing pin and the drum!



CLEANING

Clean the device after each use.

Use gun oil and a cloth or a soft brass or plastic brush to clean the drum and nut.

REPAIRS

A device that does not function properly can be dangerous. Do not attempt to repair the device yourself, incorrect assembly can lead to dangerous malfunctions.



A CAUTION

Have the unit inspected and repaired only by an authorized specialist dealer or gunsmith!



Wehntalerstrasse 6
CH-8154 Oberglatt
Switzerland
info@vogtwaffen.ch
www.vogtwaffen.ch
+41 (0) 79 215 14 16

DTT6 - Gen 2.0 - anscha - 04.12.2019 - EN - V.1.4